

Welcome!

Thank you for purchasing Wayfinder Navigator™ Allen Sports Edition. This is a start up guide with step-by-step instructions that will guide you from the installation of the software through to a simple search!

More detailed instructions on the installation process can be found at **MyWayfinder.com**, and more instructions on how you use the application can be found in our online manual at **www.allensportsusa.com/navigator**



ALLEN SPORTS USA - 505 Beachland Boulevard - Suite 5
Vero Beach, FL 32963- USA
(800)722-5535 / Fax (772)234-5796
www.allensportsusa.com

Copyright © 2007 Wayfinder Systems AB. All rights reserved. Reproduction, transfer, distribution or storage, in whole or in part, of this document in any form is prohibited, without written approval of Wayfinder Systems AB. Product logos and trademarks of Wayfinder Systems AB and its products, are property of Wayfinder Systems AB and are protected against unauthorised use by trademark law. Other products and company names mentioned herein are trademarks and/or registered trademarks of their respective company. Wayfinder Systems AB continuously develops its products. Wayfinder Systems AB reserves the right to make changes and improvements of Wayfinder Navigator™. Pictures in this Start Guide may differ from the ones in Wayfinder Navigator™.

Copyright © 2007 R.A. Allen Co., Inc., All Rights Reserved.

Find your phone!

Start by finding your phone. For a complete list of compatible phones, please visit www.allensportsusa.com/navigator/phones. Please note that the instructions differ between the phone models, please find your phone here and go to the relevant page number.

Smartphones

KEYPAD PHONES

Nokia

E.g. Nokia N73, 3250, 5500, E61, E70, N73, N80, N92, N95

Page 4



Windows Smartphones

All compatible Windows Smartphones, e.g. AT&T Blackjack, HTC MTeoR, T-Mobile Dash

Page 4



TOUCH SCREEN PHONES

Sony Ericsson

All compatible Sony Ericsson touch screen phones, e.g. M600i, P1i, W950i

Page 4



Windows Pocket PC

All compatible Windows Pocket PC phones, e.g. AT&T 8525, T-Mobile Wing, HP 6915

Page 4



Java based phones

Sony Ericsson

All compatible Sony Ericsson non touch screen phones,
e.g. K810i, K610i, W710i, W810i, W880i

Page 9



Nokia

E.g. Nokia 6300, 5300, 5500, 6233,
6234, 6288

Page 9



BlackBerry

All compatible BlackBerry devices,
e.g. BlackBerry 8700, 8100, 8800

Page 12



Get started - Smartphones

Before you can begin navigating you need to **install** the software, **activate** the service and **connect** a GPS receiver. Please be aware that the installation process may differ between the phone models. For more detailed instructions on the installation procedure, please visit www.allensportsusa.com/navigator

I. Installation

1. Go to <http://allennav.net> from the Internet browser in your mobile phone.
Alternatively, you can visit <http://allennav.net> from your computer and install the software by USB or Bluetooth transfer.
2. Accept connecting to the Internet. If you cannot connect to the Internet, check your access points in the settings of your phone or contact your network service provider and ask for an Internet connection.
3. Open the link “**Click here**” to start downloading Wayfinder Navigator™ Allen Sports Edition.
4. Answer **Yes** to the questions that you are asked before the installation begins.
5. If there is a memory card/stick in your phone, you need to decide if you want to save the software in the internal memory or on the memory card/stick.
6. When installation is complete, the application will automatically start up and you will be asked to activate the service(if the application does not start automatically, click on the application icon in the main menu).

II. Activation

Now it is time to connect to the Wayfinder server via the Internet - **GPRS, 3G** or **EDGE** (not WAP). If you do not have a compatible data subscription, please contact your network service provider.

1. When the application starts, read and accept the User Terms.

2. Allow connection with the Internet by pressing **Yes**.

We recommend you to choose **Automatic Search** for an Internet Access Point. Accept the working Internet Access Point that is found. If you do not have an Internet Access Point, a message with the text "No Internet access point available" will be shown.

If your mobile phone does not automatically detect an Internet Access Point, please contact your network service provider.

3. A view with three alternatives is shown. Highlight **Activate** and press the joystick or use the stylus. Enter your **activation code** found on the back of this manual. Thereafter, enter your **phone number** in the international format, e.g 650-123-4567 should be written +16501234567.

4. Select **Send**.





5. Complete your activation by allowing the application to send an activation SMS to the Wayfinder server. Please note that you will not receive a reply.

6. The main menu of Wayfinder Navigator™ Allen Sports Edition will be displayed.

III. Connect the GPS receiver

1. Please read the instructions that came with your Allen Sports GPS receiver. Charge the GPS receiver before you turn it on. Make sure that it has a clear view of the sky; e.g. put it by a window if you are inside a building or on the dashboard of your car.


Sometimes a PIN code is required when connecting the GPS receiver. The Allen Sports GPS receiver uses 0000.

2. Open your Wayfinder Navigator™ Allen Sports Edition. In some cases your GPS receiver will be connected through a set up guide that will start automatically. If not, please follow the instructions below:
3.
 - **Keypad phones:** Select **Menu/Options > Connect to GPS** from the main menu.*
 - **Sony Ericsson touch screen phones:** Select **More/ Wayfinder > Connect to GPS***
 - **Windows Pocket PC phones:** Click on this icon  *
4. The mobile phone searches for available Bluetooth units. Select your Bluetooth GPS receiver in the list.
5. When the GPS receiver has pinpointed your position, the quality of your GPS position  or  or  will be shown in the display of your mobile phone. Usually it takes about 30 seconds for the GPS receiver to find your position when turned on. In some cases it could take a few minutes. Please note that the first time you do this, it could take up to 20 minutes.

**If asked if you want to turn on the Bluetooth connection, answer yes.*

IV. MyWayfinder.com

In addition to the navigation system in your mobile phone, Wayfinder Navigator™ Allen Sports Edition also includes a personal navigation homepage. When you have installed and activated the application on your phone, you can access your personal account on your computer. To be able to log on to **MyWayfinder.com** you need a **username** and a **password**:

1. Go to the **Settings** menu from the main menu of the application by selecting 
2. In order to receive your **Username** go to **Comm (Communication) > Username**.
3. In order to create your **Password** go to **Comm (Communication) > Password**. Enter a password of 4 to 25 characters and then press **Save/OK** and then **Back**.

At **MyWayfinder.com** you will be able to manage your account and find a list of frequently asked questions, among other things.

Start navigating - Smartphones

Follow the instructions below to get started with your Wayfinder Navigator™ Allen Sports Edition. For more details, please visit our online manual at www.allensportsusa.com/navigator

1. Make sure that you are connected to the GPS receiver and receiving GPS-data.

2. Select **Search**  in the main menu.

3. Fill in the search fields. If you do not know the exact spelling, only enter the first letters. The **Country** always has to be defined (select the country from the list) together with at least one other field to complete the search request.

*Good to know: If the destination is close enough to your current position, you can use **My current position** instead of entering the **Town or Post code** and **Country**.*

4. Start searching for the destination:

Keypad: press the joystick or select **Menu/Options > Search**

Touch screen: click on **Search** or on this icon 

5. The address may be found in several towns with a similar name. In this case, select the appropriate from the alternatives.
6. Highlight the desired destination with the joystick or the stylus and press it down to calculate a route.
7. You will now be guided with voice instructions to your destination!



The Guide View in a Nokia keypad phone

Get started - Java based phones

The following instructions only concern Java based phones. Please be aware that the installation process may differ between the phone models. For more detailed instructions on the installation procedure, please visit www.allensportsusa.com/navigator

I. Installation and activation

1. Please read the instructions that came with your Allen Sports GPS receiver. Charge the GPS receiver before you turn it on. Make sure that it has a clear view of the sky; e.g. put it next to a window if you are inside a building or on the dashboard of your car.


2. Go to <http://allennav.net> from the Internet browser in your mobile phone.

Alternatively, you can visit <http://allennav.net> from your computer and install the software by USB or Bluetooth transfer.

3. Accept connecting to the Internet.


If you cannot connect to the internet, check your access points in the settings of your phone. For more details, please visit our online manual at www.allensportsusa.com/navigator

4. Click on the link "**Click here**" to download the software and then select **Games** or **Applications** to save the application on the phone.
5. Select **Start now** and allow an Internet connection. Answer **Yes** to the questions that you are asked before the installation begins.
6. When the installation is complete the application appears and you will be asked to enter your **activation code**, found on the back of this manual. Thereafter, enter your **phone number** in the international format e.g. 650-123-4567 should be written +16501234567.
7. Select **Send**.

8. The mobile phone searches for available Bluetooth units. Select your Bluetooth GPS receiver. Bluetooth GPS receivers that are found should be marked with an asterisk*. Accept connection with your Bluetooth GPS receiver.
9. The main menu of the application will be displayed.
10. When the GPS receiver has pinpointed your position, the quality of your GPS position  will be shown in the map view of your mobile phone. **X** means that there is no GPS data. Usually it takes about 30 seconds for the GPS receiver to find your position when turned on. However, the first time it could take up to 20 minutes.

II. MyWayfinder.com


In addition to the navigation system in your mobile phone, Wayfinder Navigator™ Allen Sports Edition also includes a personal navigation homepage. When you have installed and activated the application on your phone, you can access your personal account on your computer. To be able to log on to **MyWayfinder.com** you need a **username** and a **password**:


1. Go to the **Settings** menu from the main menu of the application by selecting .
2. In order to receive your **Username** go to **Comm (Communication) > Username**.
3. In order to create your **Password** go to **Comm (Communication) > Password**. Enter a password of 4 to 25 characters and then press **Save/OK** and then **Back**.

At **MyWayfinder.com** you will be able to manage your account and find a list of frequently asked questions, among other things.

Start Navigating - Java based phones

Follow the instructions below to get started with your Wayfinder Navigator™ Allen Sports Edition. For more details, please visit our online manual at www.allensportsusa.com/navigator

1. Make sure that you are connected to the GPS receiver and receiving GPS-data.
2. Select **Find**  in the main menu of the application.
3. Fill in the search fields. If you do not know the spelling, only enter the first letters.
4. Start searching for the destination by selecting **Find**.
5. The address may be found in several towns with similar name. Select one of the alternatives among the search results by pressing down the joystick.
6. Browse between the new search results and select **Options > Navigate**.
7. Select navigation view.
8. You will now be guided with voice instructions to your destination!

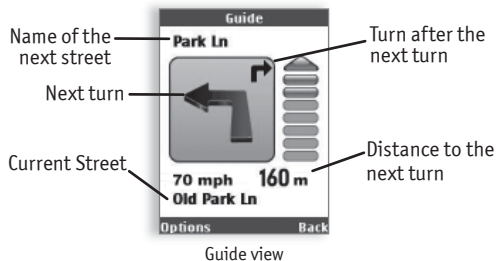

Get started - BlackBerry


The following instructions only concern **BlackBerry** devices. Please be aware that the installation process may differ between phone models. For more detailed instructions on the installation procedure, please visit www.allensportsusa.com/navigator

1. Please read the instructions that came with your Allen Sports GPS receiver. Charge the GPS receiver before you turn it on. Make sure that it has a clear view of the sky; e.g. put it next to a window if you are inside a building or on the dashboard of your car.
2. Before you start the application you need to pair your GPS receiver with your phone:
 - Go to **Settings** in the main menu of the phone and select **Bluetooth**.
 - Make sure that Bluetooth is set to **Enabled**. Press the menu key and select **Add device**.
 - The phone will now start searching for available units. Select your GPS receiver from the list.

NB! If you have device software 4.2 or 4.2.1 **and** have more than one Bluetooth GPS device paired with your BlackBerry, then you have to go back to the **Settings** menu of the phone, select **Advanced options > GPS** and make sure that your GPS receiver is selected there as well.


Sometimes a PIN code is required when connecting the GPS receiver. The Allen Sports GPS receiver uses 0000.

3. Verify that you have Internet Access:
 - a) Look for an icon in the main menu named "Internet Browser". If this is present, please go directly to step 4.
 - b) Go into **Settings > Advanced Options > Service Book**. If this view is empty, please contact your network service provider to have service entries sent to your device. Once you have the service entries, please begin from **a**).

- c) If your BlackBerry is connected to an Enterprise Server, please check with your server administrator to see if you can access the Internet with applications such as Wayfinder Navigator™ Allen Sports Edition.
- d) If the steps above do not work, please contact your network service provider and ask for Internet Access Point settings that allow unmodified HTTP traffic to pass through on port 80 or 12211. Enter the details in **Settings > Advanced Options > TCP** (does not apply to BlackBerry 8707).
4. Go to **http://allennav.net** from the Internet browser in your device.
 5. Click on the link **Click here** and select **Download** to download the software.
 6. If asked to reboot your phone, please accept. When the phone is rebooted, open the application by clicking on the Wayfinder Navigator™ Allen Sports Edition icon in the program menu.
 7. When the installation is complete, select **Run** to start the application. You will now be asked to enter your **activation code**, found on the back of this manual. Thereafter, enter your **phone number** in the international format e.g. 650-123-4567 should be written +16501234567
 8. Press **Send**.
 9. You will now be asked if you want to set up your GPS. Select **Yes** and select your GPS from the list with paired GPS devices that are shown.
 10. The main menu of the application will be displayed.
 11. When the GPS receiver has pinpointed your position, the quality of your GPS position  will be shown in the map view of your mobile phone. **X** means that there is no GPS data. Usually it takes about 30 seconds for the GPS receiver to find your position when turned on. Please note that the first time you do this, it could take up to 20 minutes.

MyWayfinder.com


In addition to the navigation system in your mobile phone, Wayfinder Navigator™ Allen Sports Edition also includes a personal navigation homepage. When you have installed and activated the application on your phone, you can access your personal account on your computer. To be able to log on to **MyWayfinder.com** you need a username and a password:


1. Go to the **Settings** menu from the main menu of the application by selecting 
2. In order to receive your **Username** go to: **Communication > Username.**
3. In order to create your **Password** go to: **Communication > Password** and enter a password of 4 to 25 characters and **Save.**

At **MyWayfinder.com** you will be able to manage your account and find a list of frequently asked questions, among other things.

Start Navigating - BlackBerry

Follow the instructions below to get started with your Wayfinder Navigator™ Allen Sports Edition! For more details, please visit our online manual at www.allensportsusa.com/navigator

1. Make sure that you are receiving GPS data.
2. Select **Find**  in the main menu of the application.
3. Fill in the search fields.
If you do not know the spelling, only enter the first few letters.
4. Start searching for the destination by selecting **Find**.
5. The address may be found in several towns with similar name. Select one of the alternatives among the search results.
6. Browse between the new search results and select **Options > Navigate**.
7. Select navigation view.
8. You will now be guided with voice instructions to your destination!

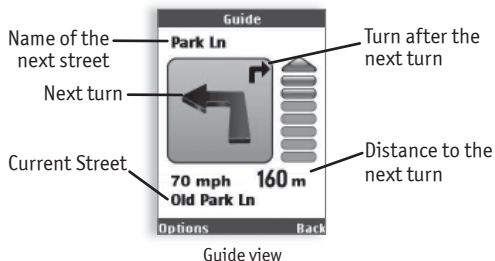

Safety information

The Customer should be aware of that there might be errors or defects in the Service as well as in the information supplied through or in conjunction with the Service. The Service is supplied "as is". Furthermore, the Customer understands that those maps and other information from third parties on which the Service is based may be incomplete, incorrect or defective and that Wayfinder Systems AB is not responsible for these errors or deficiencies. However, in the case of defects that make it impossible to use the Service, Wayfinder Systems AB will with reasonable efforts take corrective measures as soon as possible.

The information provided through the Service is to be seen as recommendations and should not be viewed by the Customer as instructions. If a recommendation supplied through the Service deviate from local traffic regulations or other local conditions, the Customer must always abide by and take into consideration these local regulations and conditions. Use of the Service is at the Customer's own risk and it is always the Customer's responsibility and duty to act in a manner that will not jeopardize the traffic safety of the Customer or any other person.

The safety information above, is an extract from the Terms of service for Wayfinder Navigator™. You find the complete agreement at MyWayfinder.com.